# **CRP PANEL thanos EVO Casambi**

Casambi Room operating unit



#### Datasheet

Subject to technical alteration Issue date: 05.02.2024 • A131

thanos**EVO** CASAMBI



# » APPLICATION

Room control unit with Casambi radio interface for intuitive lighting control of Casambi ecosystem participants with up to three integrated sensors for recording room temperature, humidity and CO2. Scenes are started, colors selected or luminaires switched via a 4.8" touch screen. Easy configuration via the Casambi app allows device-specific settings or configuration of scenes and lighting functions with Casambi radio.

### » TYPES AVAILABLE

Touch screen room operating unit temperature + opt. humidity, CO2

- CRP PANEL thanos EVO Temp Casambi\*
- CRP PANEL thanos EVO Temp\_rH Casambi\*
- CRP PANEL thanos EVO Temp\_rH CO2 Casambi\*

\* also available as design variant

#### » SECURITY ADVICE – CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual .

#### » PRODUCT TESTING AND CERTIFICATION



Declaration of conformity The declaration of conformity of the products can be found on our website https://www.thermokon.de/direct/en-gb/categories/thanos-evo

### » NOTES ON DISPOSAL



The crossed-out wheelie bin symbol indicates that the product or removable batteries must not be disposed of with household or commercial waste. Within the EU, you are legally obliged to dispose of the product separately and appropriately in accordance with the national laws of your country. Alternatively, please contact your supplier or Thermokon Sensortechnik GmbH. Further information can be found at: <a href="http://www.thermokon.com">www.thermokon.com</a>

#### » MOUNTING ADVISE ROOM SENSORS

The Accuracy of the room sensors are influenced by the technical specifications as well as the positioning and the installation type.

#### **During Assembly:**

- Seal mounting box (if present).
- Installation type, air draught, heat source, radiation heat or direct sunlight can affect the measurement.
- Bulding material specific properties of the installation place (brick-, concrete-, partition wall, cavity wall, ...) can affect the measurement. (e.g.: Concrete accepts room temperature variation slower than cavity walls)

#### Assembly not recommendet in...

- Air draught (e.g.: close to windows / doors / fans ...)
- Near heating sources,
- Direct sunlight
- Niches / between furniture / ...

#### » BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage  $(\pm 0, 2 \text{ V})$  this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =. At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

#### » APPLICATION NOTICE FOR HUMIDITY SENSORS

At regular environmental condition, it is recommended to calibrate the sensor annually to check the compliance with the accuracy required in the application. The following conditions can damage the sensor element or lead in long therm to loss of the specified accuracy:

- Mechanical stress
- Contamination (e.g. dust / fingerprints)
- Aggressive chemicals
- Ambient conditions (e.g. condensation on measuring element)

Re-calibration or exchange of the sensor element are not subject of the general warranty.

#### » INFORMATION ABOUT SELF-CALIBRATION FEATURE CO2

All gas sensors are subject to drift. The degree of drift is dependent on the use of components and product design. In addition, the following environmental conditions, among others, can accelerate/ favor the aging and wear of the sensors:

- Mechanical stress (also due to temperature fluctuation)
- Contamination (dust / fingerprints e.g.)
- Abrasive chemicals
- Environmental influences (high humidity / condensation on measuring element)

An internal self calibration function with dual channel technology compensates the caused drift. Thermokon sensors are for permanent use (e.g. hospitals).

#### » INFORMATION ABOUT INDOOR AIR QUALITY CO2

EN 13779 defines several classes for indoor air quality:

Category	CO <sub>2</sub> content above the content	in outdoor air in ppm	Description	
	Typical range	Standard value		
IDA1	<400 ppm	350 ppm	Good indoor air quality	
IDA2	400 600 ppm	500 ppm	Standard indoor air quality	
IDA3	6001.000 ppm	800 ppm	Moderate indoor air quality	
IDA4	>1.000 ppm	1.200 ppm	Poor indoor air quality	

6

Do not touch the sensor elements!

# » TECHNICAL DATA

Measuring values	temperature, optional humidity   CO2			
Network technology	Casambi (Evolution) 2,4 GHz			
Power supply	24 V = ( $\pm$ 10%) or 24 V ~ ( $\pm$ 10%) SELV With alternating voltage, the correct polarity must be ensured.			
Power consumption	typ. 2,5 W (24 V =)   5 VA (24 V ~) <sup>2</sup>			
Measuring range temp	0+50 °C			
Accuracy temperature	±0,5K (typ. at 21 °C)			
Casambi functions	light ON/OFF/DIM, colour temperature, colour control RGBW, setup scenarios, 2D Room plan, measured value display & history			
Display	TFT 4,8", 1120x480 px, capacitive touch technology			
Enclosure	PC V0 and glass, Surface glass, white or black   design variant glas + aluminium			
Protection	IP30 according to DIN EN 60529			
Cable entry	rear entry, breaking points bottom, drill mark top			
Connection electrical	tool-free mountable spring terminal, max. 1,5 mm <sup>2</sup>			
Ambient condition	0+50 °C, max. 85% non-condensing			
Mounting	surface mounted on flush-mounting box ( $\emptyset$ =60 mm) or to be mounted flat onto the surface using screws, base part can be mounted and wired separately			
<sup>2</sup> type inrush current: 2A (< 5 ms)				
» Humidity (optional)				
Measuring range humidity (relative)	0100% rH			
Accuracy humidity	±2% between 1090% rH (typ. at 21 °C)			
» CO2 (optional)				
Measuring range CO2	02000			
Accuracy CO2	±50 ppm +3 % of reading, typ. at 21 °C, 50% rH, 1015 hPa			
Calibration	self-calibration dual channel			
Sensor	NDIR (non-dispersive, infrared)			


# **»**CONNECTION PLAN

#### Room operating unit - Casambi

thanos EVO	
-n.c.  -n.c.  -n.c.  -n.c.  -n.c.  -n.c.  -n.c.  -n.c.  -GND-0V⊥  -UB+24V = (±10%) oder 24 V ~ (±10%)	

# » MOUNTING ADVICES

#### Cable entry

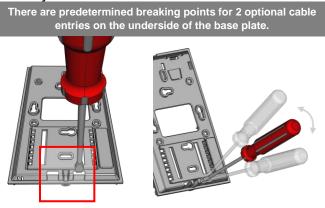

Snap the upper part of the housing into the locking lug on the

upper side


#### Housing open / close

Please make sure that the device is de-energized if you want to install it!

The installation can be performed on the flat wall surface or on a flush-mounted box. A representative place should be selected. Sunshine and draft, e.g. in the installation tube should be avoided, so that the measurement result is not falsified. Seal the end of the installation tube.


- For wiring, the upper part of the device must be removed from the base plate. Base plate and upper part are detachably connected to each other by means of locking lugs.
- The mounting of the base plate on the flat wall surface is done with rawplugs and screws.
- Finally, the device is attached to the base plate and fixed with the screw.

Fix the upper part of the housing on the underside with the screw

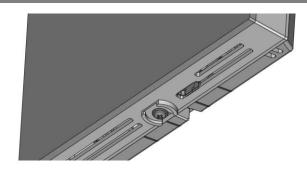

#### » CONFIGURATION

The configuration is performed in powered state. The following options are available for configuring the device:

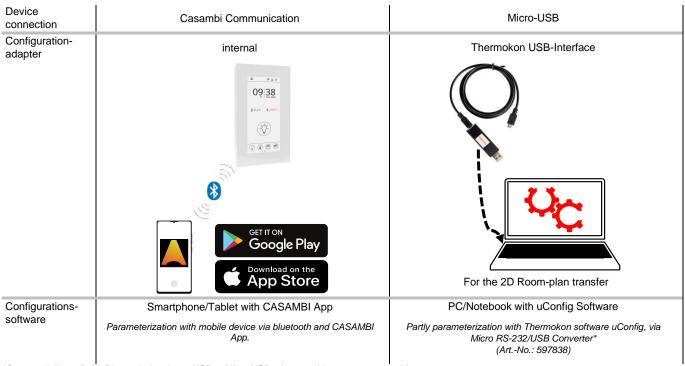


\*Commercially available Bluetooth dongles or USB to Micro-USB adapter cables are not compatible.



Position of the micro USB port, see bottom of the device, for configuration with Bluetooth dongle or Micro-USB programming interface

## » FUNCTION DESCRIPTION – HOMESCREEN THANOS EVO

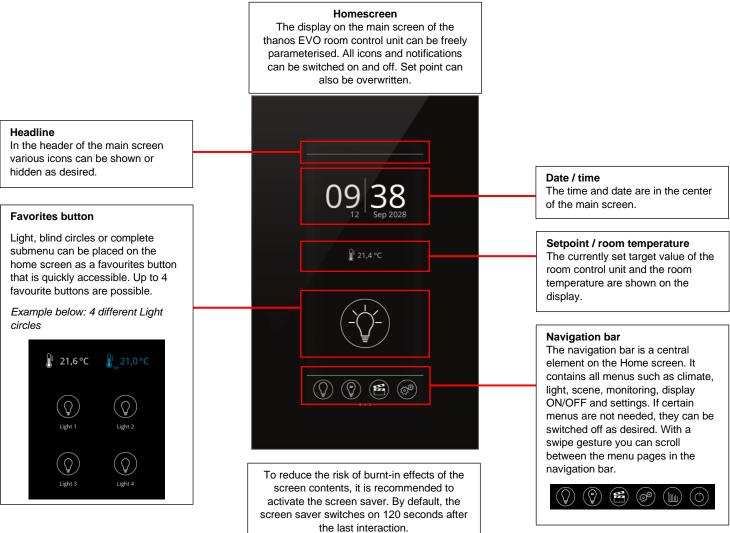

#### » CASAMBI COMISSIONING

- 1. Connect the device to the power supply. Observe the connection diagram!
- 2. Open Casambi App (iOS App Store / Android Play Store)

If an unpaired device is found, it is suggested to add the device to a network.

3. Add thanos EVO to an existing Casambi network, is required switch to other Casambi network first.

After pressing the "back" button the network can be changed ("my networks").

- 4. The device appears in the gateway section.
- 5. Configure the thanos Evo Casambi parameters.




#### » CASAMBI PARAMETER

PARAMETERS	Settings (parameter LTBC							
Settings d12r >		ime synch	B = Behavior					
Favorites 0000 >		o time synch me synch from Casambi	1 – external co (configurab	ntrol le via BUS)				
G1 selection Select group >	X – no change to	o device	2 – standalone	/panel le only via CASAMBI)				
G1 name G1 Name >	C = display color scheme	_	(coniguiad					
G1 type 30112740 >	<ul><li>x background color / text</li><li>0 no change</li></ul>	color <b>B</b> black / white <b>W</b> white / black	G green L blue /					
Example settings: d12I = germar	] -	I		I				
Example seurigs. u izi – german	-							
PARAMETERS	Favorites* (ABCDE)	PARAMETERS		Gx selection / name (Selection / Input field)				
Settings d12r >	A favorite button 1 B favorite button 2	Settings	d12r >					
Favorites 0000 >	C favorite button 3	Favorites	0000 >	Selection – Casambi group				
G1 selection Select group >	D favorite button 4 E favorite button 5	G1 selection	Select group >	Name – group name				
G1 name G1 Name >	Default value: 0 - none	G1 name	G1 Name >					
G1 type 30112740 >	i.E.: 0b300	G1 type	30112740 >					
	– none / scene 2 / group 3		]					
Favorites								
1 Group 1	a Scene 1	i Presence	q	shading 1				
2 Group 2	b Scene 2	j Eco	r	shading 2				
3 Group 3	c Scene 3	k Climate menu	S	shading 3				
4 Group 4	d Scene 4	I Lighting menu	<u>t</u>	shading 4				
5 Group 5	e Scene 5	m Blind menu	u	shading 5				
6 Group 6	f Scene 6	n Scene menu	V	shading 6				
7 Group 7	g Scene 7	o Monitoring men		shading 7				
8 Group 8	h Scene 8	p fan menu (Novo	os 7) x	shading 8				
	-							
PARAMETERS	<u>Gx type</u>			Scene symbol				
Settings d12r >	(Light group configuration)	Scene symbol	11111111 >	(Scene symbol configuration)*				
Favorites 0000 >	ITDSMnMx	S1 selection	Select scene	1. digit = scene symbol 1 2. digit = scene symbol 2				
	I – Icon	S1 name	S1 Name 🔾	0 ,				
G1 selection Select group >	T – Type D – Dim function	S2 selection	Select scene >	Sx selection / name (Selection / Input field)				
G1 name G1 Name >	S – Step size		S2 Name >					
G1 type 30112740 >	Mn / Mx – minimum / maxin Color temperati		52 Name /	Selection – scene				
	·			Name – scene name				
Gx Type parameter listing								
	cassette, 3 – floor lamp (defa	ault)						
	BW colourpicker, 2 – colour te	,						
D 0 – not dimmable, 1 – dimn	nable (default)							
	3-3, 4-4, 5-5, 6-10, 7							
Input value (2 digits) multiplied with 100 = minimum kelvin (Color Temperature) (i.E.: Mn = 27 -> CTmin = 27 * 100 = 2700K (default))								
	lied with 100 = maximum kelv	vin (Color Temperature) (i.	E.: Mx = <b>40</b> -> 0	CTmax = 40 * 100 = 4000K				
Example Gx Type: 30112740 =	floor lamp   slider   dimmable	1   min kelvin color temp	) 2700k   max ke	lvin color temp 4000k				
		1 . 1						
Scenen symbol parameter listing	g							
0 work (briefcase) 1 presentation (canvas)								
2 cinema (screen)								
4 bedroom (bed)	3 party (cocktail glass) 4 bedroom (bed)							
5 food (serving bell)								
6 do not disturbe (lock)								
7 cleaning (vaccum cleaner)								
8 scene (clapperboard)								

Example scene symbol: 02437000 = scene 1: work | scene 2: cinema | scene 3: bedroom | scene 4: party | scene 5: cleaning

#### » DIMENSIONS (MM)

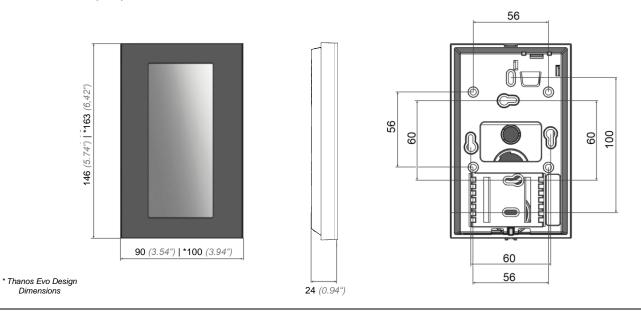

# » ACCESSORIES (OPTIONAL)

Rawlplugs and screws (2 pcs. each)

PSU-UP24 – flush mount power supply 24 V (AC Input: 100..240 V ~ | DC Output 24 V = 0,5 A) Thermokon USB-Interface

Item No. 102209 Item No. 645737 Item No. 597838