

MITRA 250 SMART USER MANUAL

WHAT IS A SMART ROOM THERMOSTAT?

A smart room thermostat is a device that allows you to control your heating equipment via APP with the internet even when you are not at home.

HOW DOES MITRA 250 SMART WORK?

MITRA 250 SMART is a smart wireless room thermostat. You can control it with the mobile application after you pair your room thermostat with the receiver, and complete the installation of the smart receiver.


WHAT ARE THE ADVANTAGES OF THE MITRA 250 SMART?

- You can control your home's temperature via its mobile application, no matter where you are in the world.
- You can easily create daily and weekly schedules via its mobile application.
- You can place the room thermostat anywhere in your home, thanks to its use with batteries.
- It ensures that your living space stays at the desired temperature at any time. In this way, you can save up to 30% on your bills by preventing your heating unit from working unnecessarily.

RULES THAT NEED TO BE OBSERVED FOR SAFETY

- Be sure to read the user manual before using the device and its equipment.
- Opening, disassembly, or use of plastic parts of the product and equipment other than the intended purpose are out of warranty.
- Please make sure that the sockets to which you connect your devices and equipment are at the recommended voltage value in the user manual.
- Keep away and protect your product and its equipment from all kinds of external substances such as liquid, dust, heat, etc.
- Do not expose the device cables to any jamming and pressure. Take care to connect the devices' energy connection to the sockets you can always reach.
- Turn off the electrical power to prevent damage to your device and apparatus in case of lightning and thunderstorms.
- Turn off the electrical power when your device is not used for a long time.
- Your devices and equipment should be used by paying attention to the matters stated in the user manual. In case of damage and malfunctions, arising from improper use (contact with liquid, falling to the ground, etc.) definitely ask for the installer's help.
- Call our service for maintenance and repair of MITRA 250 SMART and its equipment. Maintenance and repair of the device and equipment should be carried out only by the technical service of ISIPARK A.S. and its authorized services, spare parts, and accessories specified by the company should be used.

MITRA 250 SMART and EQUIPMENT

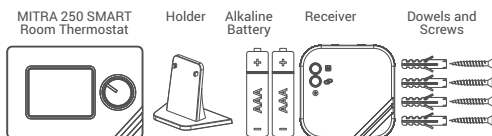


TECHNICAL DATA

Room Thermostat	
Dimensions (H/L/W)	85mm / 125mm / 24mm
Operating Current	3V DC (2 x AAA Alkaline Battery)
Temperature Measurement Accuracy	0.1°C
Operating Sensitivity	(-2.0°C) – (+2.0°C)
Operating Temperature Range	(5°C) – (40°C)
Battery Life	1 Year (2 x AAA)
Operating Temperature	(-10°C) – (+50°C)
Storage Temperature	(-20°C) – (+60°C)

Receiver

Dimensions (H/L/W)	90mm / 90mm / 25mm
Operating Current	230V AC
Relay NO Switching Current	7A (240VAC – Resistive Load) 10A (120VAC – Resistive Load)
Storage Temperature	(-20°C) – (+60°C)


ROOM THERMOSTAT

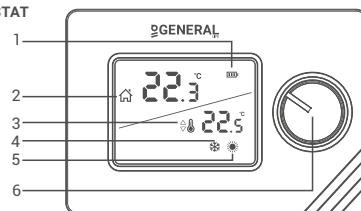

1	Battery Indicator
2	Room Temperature
3	Set Temperature
4	Cooling Indicator - If the Cooling Indicator is blinking, the cooling unit is working. - If the Cooling Indicator is steady, the cooling unit is not working.
5	Heating Indicator - If the Heating Indicator is blinking, the heating unit is working. - If the Heating Indicator is steady, the heating unit is not working.
6	ON/OFF and Temperature Setting Button

Note: During active use of the room thermostat, the symbols indicated by 3, 4 and 5 will not appear on the screen.

RECEIVER

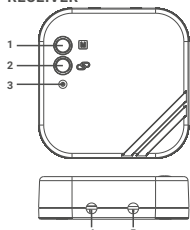


- Manual Operation Button:** Deactivates the receiver and allows users to manually use the heating/cooling unit.
- Wi-Fi Pairing Button:** Makes the receiver ready for smart installation.
- Receiver LED Light**
- Receiver Power Cable Input**
- Heating/Cooling Unit Connection Cable Input**

RECEIVER LED DESCRIPTIONS


Blinking Red	The receiver did not get any signal from the heating/cooling unit for 22 minutes or longer and the heating/cooling unit has shut down.
Fast Blinking Red	Waiting for a pairing signal from the room thermostat.
Steady Red	The receiver and the room thermostat have been paired. Smart installation has not been completed.
Blinking Green	The receiver is in Bluetooth searching mode.
Steady Green	Smart installation has been completed. The heating/cooling unit is not working.
Steady Turquoise	The heating/cooling unit is working.
3 Short Red Blinking	Shut the heating/cooling unit down signal has reached the receiver.
3 Short Green Blinking	Operate the heating/cooling unit signal has reached the receiver.
Blinking Red and Green	The heating/cooling unit is working in manual mode.

ROOM THERMOSTAT PLACEMENT

The room thermostat needs to be placed in the room which is used most frequently. For instance; the living room or lounge. Placing the room thermostat in a spot that has air circulation like the entrance of a room or the side of the window should be avoided. Also anywhere close to heating/cooling units such as a radiator, stove, and spots that get direct sun lights would not be suitable. The room thermostat needs to be located above the floor 150 cm in height. Few trials may be made to find the most convenient spot.

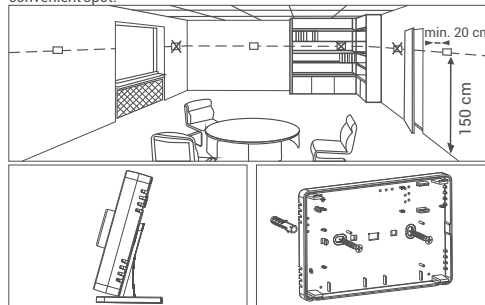

BATTERY PLACEMENT

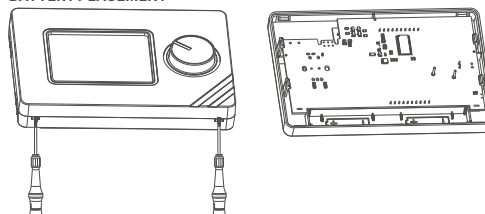

Press the screwdriver forward from the space at the bottom of the room thermostat, bend the tabs and separate the front cover. Insert 2 new AAA alkaline batteries in the battery housing with the correct battery direction. Replace both batteries at the same time. Align the front part of your room thermostat with the corresponding slot on the back, and then push gently until the thermostat snaps into place.

Low Battery Warning: When the "Lb" icon appears on the screen, it means "low battery warning". It is recommended to replace the batteries when this warning appears.

Warning: When the product is not used for a long period (more than 15 days), remove the batteries. Otherwise, malfunctions that may occur would be out of warranty. Please throw your dead batteries into the waste bin for batteries.

RECEIVER PLACEMENT



The important things to note for the Receiver placement are avoiding physical contact between the receiver and the heating/cooling unit, and protecting it against materials such as liquid, dust, etc.


The devices should be placed to minimize the damage to the received and transmitted signals by paying attention to the following points;

- The devices should not be mounted on metal surfaces.
- The devices should not be installed close to electrical cables and electronic equipment such as computers and television units.
- The devices should not be installed near large metal structures or other building materials using fine metal meshes such as special glass or special concrete.
- Distance between the room thermostat and the Receiver should not exceed 20 meters or 2 floors.
- The receiver must be installed at least 50 cm away from the heating/cooling unit.

RECEIVER INSTALLATION

- First, shut down your heating/cooling unit and your heating/cooling unit's power source with all electrical current (fuse, socket, etc.)
- As shown in the connection diagram, connect one end of the heating/cooling unit connection cable to the COM and the other to the NO input of the receiver.
- Connect the other ends of the cable -which you connected to the receiver- to the room thermostat connection terminal as shown in your heating/cooling unit's user manual.
- You must first connect the receiver power cable to the receiver and then to the fuse to which the heating/cooling unit is connected.
- After completing the cable connection process, first, turn on your fuse and then your heating/cooling unit.
- Finish the installation of the room thermostat to pair the receiver with the room thermostat.

RECEIVER WIRING DIAGRAM

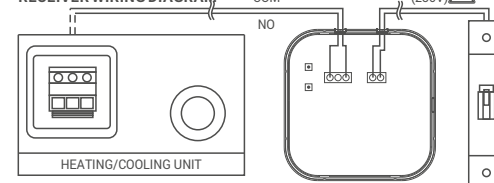

Warning!

Operations within the heating/cooling unit or the electrical installation must be carried out by professionally qualified persons.

PAIRING THE ROOM THERMOSTAT WITH THE RECEIVER

- To pair the room thermostat with the receiver, press the "Manual Operation Button" and "Wi-Fi Pairing Button" together at the same time and see the receiver's fast blinking red LED.
- Press the button for 3 seconds while your device is turned off.
- Press the button until "Pd." the pairing menu appears.
- Turn your room thermostat's button while the LED is fast blinking red.
- If the pairing is successful, the fast red flashing LED on the receiver will be steady.
- The receiver and room thermostat have been paired with each other.

SMART RECEIVER SETUP

- For smart receiver setup, download the application from App Store or Google Play or scan the QR code below with your smartphone. In this way, you will be able to download the mobile application from App Store or Google Play to your smartphone. (You may be required to have a QR code reader application depending on the brand and model of your phone, for this process.)

Click to download.




ROOM THERMOSTAT TEMPERATURE CALIBRATION

Temperature sensors which are used in room thermostats are highly sensitive. You may need to calibrate your room thermostat if you would like to get the same temperature values as other thermometers in your living space.

- While your device is turned off, press the button for 3 seconds.
- Press the button until the "F_{LD}" menu appears. To see the desired temperature, set the temperature difference by turning the button right or left. This value can be arranged between "-8°C" and "+8°C".
- To save the settings and exit, press the button until the device turns off.

Note: Recommended temperature calibration is "0,0°C".

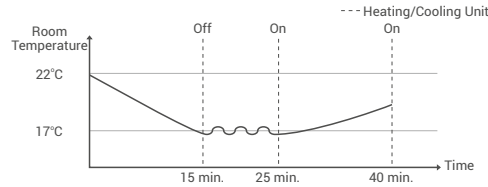

FACTORY SETTING RESET


You can reset your Room Thermostat to its default factory settings. This operation resets the calibration setting, heating/cooling modes and hysteresis settings to factory setting. To reset your Room Thermostat to factory setting:

- While your device is turned off, press and hold the button for 3 seconds.
- Press the button until the "r-5 k" menu appears.
- While in the "r-5 k" menu, turn the button to right or left in order to select "95" option and press the button.
- Your device will be turned off and reset to factory settings.

ROOM THERMOSTAT WORKING LOGIC


Heating Mode

Your room thermostat takes the average room temperature of last 40 seconds as basis. If the room temperature goes above the hysteresis positive temperature value you set, your Room Thermostat will stop the heating unit. If it goes below the hysteresis negative temperature value, your Room Thermostat will start the heating unit. Thus, it ensures that the room temperature remains within a certain range.

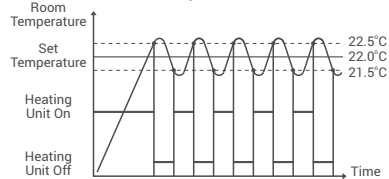

Cooling Mode

Your Room Thermostat takes the average room temperature of last 40 seconds as basis. If the room temperature goes above the hysteresis positive temperature value you set, your Room Thermostat will start the cooling unit. If it goes below the hysteresis negative temperature value, your Room Thermostat will stop the cooling unit. Thus, it ensures that the room temperature remains within a certain range.

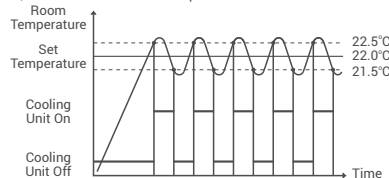

Your Room Thermostat sends the last status signal to the Receiver every 3 minutes. Thus, your Room Thermostat and Receiver work synchronously. If the signal cannot reach to the Receiver from the Room Thermostat for 22 minutes, it perceives that the connection is broken and stops the heating/cooling operation for safety reasons. Likewise, in cases where the electricity comes back after a power failure, the Receiver do not operate the heating/cooling unit until 'operate' signal reaches from the Room Thermostat.

However, in this case, if the Room Thermostat continues to operate normally, it will continue to work properly without any need for intervention since it sends a status signal to the Receiver every 3 minutes.

FREQUENTLY ASKED QUESTIONS

- Is my Room Thermostat compatible with my heating/cooling unit?
If your heating / cooling unit has on-off connections, your Room Thermostat is compatible. You can find information about your heating / cooling unit from your heating / cooling unit operating manual or from your heating / cooling unit service.
- How will I connect my heating/cooling unit with my Receiver?
We recommend that the connection between the Receiver and heating/cooling unit should be made by professionally qualified persons.
2x0.75 mm cable is sufficient for the Receiver – heating/cooling unit connection.
Connect one end of the cable pair to the room thermostat connection terminals stated in the user manual of your heating/cooling unit.
Connect the other end of the cable pair to COM and NO inputs of the terminal inside the Receiver as shown in the "RECEIVER WIRING DIAGRAM" section.
The direction of the cable ends does not matter.

DECLARATION OF CONFORMITY

ISIPARK İÇ VE DIŞ TİC. İNŞ. İSITMA SİSTEMLERİ ÖTÖ. SAN. A.Ş. which Head Office and production site is located on Fatih Mah. 1188 Sk.No:13/A Sarnıç - Gazimir - İZMİR – TÜRKİYE confirms and declares that the product marked with CE and its specifications below is covered by the provisions of the mentioned directive.

Brand : GENERAL Life
Product Name : MITRA 250 SMART
Product Type : Smart Room Thermostat
The product manufactured by ISIPARK and mentioned above is connected wirelessly at 2.4 Ghz internet and periodically shares the temperature and status information with the server on the internet.

- Compatible Directives:
- Radio and Telecommunications Terminal Equipment Regulation 2014/53/EU (ETSI EN 301 489-1 V2.2.3 (2019-11), ETSI EN 301 489-17 V3.2.4 (2020-09), EN 300 220-1 V3.1.1, EN 300 220-2 V3.2.1 (2018-06), EN 62479: 2010, EN 62368-1:2014+A11:2017)
 - Electromagnetic Compatibility Regulation 2014/30/EU (ETSI EN 301 489-1 V2.2.3, ETSI EN 301 489-3 V2.1.1)
 - Low Voltage Directive 2014/35/EU (EN 60730-2-9)
- Supplementary Information: Mentioned product can be used with combi boilers with on / off output and compatibility with the directive only covers the product. ISIPARK is not responsible for the compliance of the entire system with the directive. This declaration does not apply when changes are made to the product without obtaining our consent.



WARRANTY CONDITIONS

- 1-The warranty period starts from the invoice date and warranted against manufacturing defects for 2 years.
- 2-Devices and apparatus are delivered to the customer in working condition in our company. On-site commissioning is subject to a service fee.
- 3-The repair of the devices and apparatus covered by the warranty is carried out in our company factory and should send by contracted transportation company. In on-site services, the transportation and accommodation expenses of the service personnel belong to the customer. The shift fee during transportation is added to the service fee and collected in advance.
- 4-The maintenance of devices and apparatus is done in our company. For the maintenance of the devices and apparatus, the round travel fares belongs to the customer.
- 5-In case of malfunctioning of the devices and apparatus whose warranty period continues, it is tested in our company whether the malfunction is caused by a customer or manufacturer fault, and it is reported with a report issued by our company.
- 6-In case of detection of manufacturer-induced errors of devices and apparatus whose warranty period continues, the customer can request a replacement or repair of the devices and apparatus at full expense by the manufacturer, unless it's higher than the product's price
- 7-In the event that the faults of the devices and apparatus whose warranty period continues are determined as caused by the customer, all expenses would be belong to the customer.
- 8-Customers should be aware of damages (if there is any) of product and warn manufacturer since the day warranty duration starts. If customer do not warn manufacturer with knowledge of damage, customer lose the rights of article 6.
- 9-Malfunctions resulting from the use of devices and apparatus contrary to the matters stated in the User Manual are not covered by the warranty.
- 10-Devices and their apparatus are out of warranty if they are beaten, broken or scratched by the customer.
- 11-Damages resulting from the use of devices and apparatus belonging to other brands and models without the approval of the manufacturer are not covered by the warranty.
- 12-Battery leakage and errors due to rust, oxidation and liquid contact by working in acidic / humid environments are not covered by the warranty.
- 13-When the product is not used for a long period (more than 15 days), remove the batteries. Otherwise, malfunctions that will occur are out of warranty.
- 14-Damages that may occur during the transportation of devices and apparatus are not covered by the warranty. Customers can take a transportation insurance.
- 15-Damages caused by mains voltage / faulty electrical installation are not covered by the warranty.
- 16-Devices and apparatuses are out of warranty for malfunctions caused by force majeure such as fire, flood, earthquake etc.
- 17-All of the devices and apparatuses, including all their parts, are under the warranty of our company.

18-In case of malfunction of the devices and apparatuses within the warranty period, the time spent during repairment period is added to the warranty period. The repair period of the product cannot exceed 20 working days. This period starts from the date of notification to the service station of the malfunction related to the product or, in the absence of a service station, to the seller, dealer, agency, representative, importer or manufacturer of the product. Consumer can report the problem by; phone, fax, e-mail, registered and reply paid letter or a similar way. However, in case of a conflict, responsibility of prove is belong to the customer. If the malfunction of the product is not repaired within 20 working days, the manufacturer-producer or importer; has to allocate another product with similar features to the use of the consumer until the repair of the product is completed, 19-Although the consumer uses his/her repair rights, -If the product breaks down for 4 times in a year or 6 times in warranty duration and these problems effects main purpose of the product. (starting from delivery time during warranty) -Exceeding the maximum time required for repair. -In the event that the service station is not available, if it is determined that the repair of the defect is not possible with the report prepared (in order) by one of the seller, dealer, agency, representative, importer or manufacturer, a refund or a price discount at the rate of defect can be requested. 20-The customer can make complaints and appeals to consumer courts or consumer arbitration committees. 21-The warranty document must be kept by the customer during the warranty period. If the document is lost, a second document will not be issued. In case of loss, repair and replacement of devices and apparatus will be made for a fee.

WARRANTY CERTIFICATE

Manufacturer	
Title: ISIPARK İÇ VE DIŞ TİC. A.Ş. Address: Fatih Mah. 1188 Sk. No:13/A Sarnıç Gazimir Izmir-TÜRKİYE Tel: +90 (232) 457 99 50 Fax: +90 (232) 457 91 22 E-Mail: generalife@generallife.com.tr Authorised Signatory: Company Stamp:	
Product	
Type: Smart Room Thermostat Brand: GENERAL Life Model: MITRA 250 SMART Guarantee Period: 2 Years Max. Time to Repair: 20 Days Banderole and Serial Number:	

Vendor	
Title:.....	
Address:.....	
Tel:.....	Fax:.....
E-Mail:.....	
Invoice Date and Place:.....	
Delivery Time and Number:.....	
Authorised Signatory:.....	
Company Stamp:.....	
Product	
Type: Smart Room Thermostat Brand: GENERAL Life Model: MITRA 250 SMART	
STAMP	